Revision 1.22

GAIN CHIPS AR coated Fabry-Perot Laser

General Product Information

Product	Application
tunable 670 nm Fabry-Perot Laser	Li Spectroscopy at 671 nm
for use in an External Cavity Diode Laser (ECDL)	also covering 668 nm
sealed SOT Housing	
Monitor Diode	



Absolute Maximum Ratings

Parameter	Symbol	Unit	min	typ	max
Storage Temperature	Τs	°C	-40		85
Operational Temperature at Case	Tc	°C	0		30
Forward Current	I _F	mA			160
Reverse Voltage	V _R	V			0
Output Power (extracavity)	P _{opt}	mW			60

Recommended Operational Conditions

Parameter	Symbol	Unit	min	typ	max
Operational Temperature at Case	T _c	°C	15		20
Forward Current	١ _F	mA			140

Characteristics at T_c= 20°C, BOL under recommended working condition

Parameter	Symbol	Unit	min	typ	max
Center Wavelength	λ _C	nm		670	
Tuning Range	$\Delta\lambda_{tun}$	nm	665		675
Output Power	P _{opt}	mW		50	
Polarization				TE	
Spatial Mode (transversal)				TEM00	
Spatial Mode (transversal)				TEM00	

Measurement Conditions / Comments Stress in excess of the Absolute Maximum Ratings can cause permanent damage to the device.

Measurement Conditions / Comments

Measurement Conditions / Comments The actual achieved wavelength and power are strongly influenced by the external cavity. eyP gives no guarantee on these parameters.

E field parallel to Pin 2 - Pin 3 - plane **Fundamental Mode**

eagleyard Photonics GmbH www.toptica-eagleyard.com info@toptica-eagleyard.com fon +49.30.6392 4520

Rudower Chaussee 29

12489 Berlin GERMANY

This data sheet is subject to change without notice. © eagleyard Photonics





2021-05-19

Revision 1.22

GAIN CHIPS AR coated Fabry-Perot Laser

Amplified Spontaneous Emission (ASE) without external cavity						
Parameter	Symbol L	Jnit min	typ	max		
Divergence parallel (FWHM)	$\Theta_{ }$		10			
Divergence perpendicular (FWHM)	Θ_{\perp}		29			
Monitor Detector Responsivity	I _{mon} / P _{ASE} μA	/mW 1		40		

Measurement Conditions / Comments parallel to Pin 2 - Pin 3 plane (see p. 3) perpendicular to Pin 2 - Pin 3 plane (see p. 3) U_{R MD} = 5 V

Chip Parameter

Parameter	Symbol	Unit	min	typ	max
Cavity Length	L	μm		1000	
Reflectivity at Front Facet	R_{ff}			3·10 ⁻⁴	1·10 ⁻³
	ι «Π			5 10	110

Measurement Conditions / Comments



2021-05-19

Revision 1.22


Package Dimensions

GAIN CHIPS AR coated Fabry-Perot Laser


Parameter	Symbol	Unit	min	typ	max
Height of Emission Plane	h	mm	3.50	3.65	3.70
Excentricity of Emission Center	R	mm			0.12
Pin Length	L _{PIN}	mm		14	

Package Pinout


- 1 Laser Diode Cathode, Monitor Diode Cathode, Case
- 2 Photo Diode Anode
- 3 Laser Diode Anode

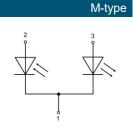

Measurement Conditions / Comments reference plane: top side of TO header reference: center of outer diameter of header



Package Drawings

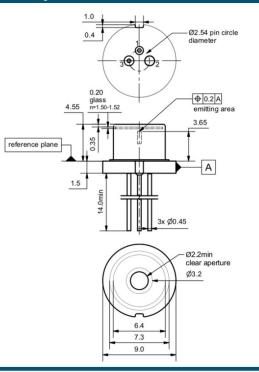

laser emission

AIZ-16-0421-1517

eagleyard Photonics GmbH Rudower Chaussee 29 12489 Berlin GERMANY www.toptica-eagleyard.com info@toptica-eagleyard.com fon +49.30.6392 4520

This data sheet is subject to change without notice. © eagleyard Photonics






Revision 1.22

GAIN CHIPS AR coated Fabry-Perot Laser

Typical Measurement Results

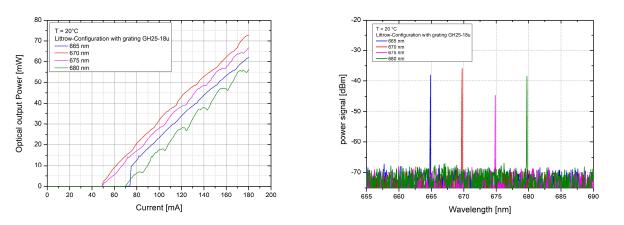

Performance figures, data and any illustrative material provided in this specification are typical and must be specifically confirmed in writing by eagleyard Photonics before they become applicable to any particular order or contract. In accordance with the eagleyard Photonics policy of continuous improvement specifications may change without notice.

Unpacking, Installation and Laser Safety

Unpacking the laser diodes should only be done at electrostatic safe workstations (EPA). Though protection against electro static discharge (ESD) is implemented in the laser package, charges may occur at surfaces. Please store this product in its original package at a dry, clean place until final use. During device installation, ESD protection has to be maintained.

The TPA diode type is known to be sensitive against thermal stress. It should not be operated without appropriate injection from a seed laser. Operating at moderate temperatures on proper heat sinks will contribute to a long lifetime of the diode. The chip should be protected against moisture. A water vapor content below 5000 ppm is recommended for applications with high reliability requirements.

The laser emission from this diode is close to the invisible infrared region of the electromagnetic spectrum. Avoid direct and/or indirect exposure to the free running beam. Collimating the free running beam with optics as common in optical instruments will increase threat to the human eye.

Each laser diode will come with an individual test protocol verifying the parameters given in this







eagleyard Photonics GmbH www.toptica-eagleyard.com info@toptica-eagleyard.com fon +49.30.6392 4520

Rudower Chaussee 29

12489 Berlin GERMANY

This data sheet is subject to change without notice. © eagleyard Photonics





2021-05-19