Revision 1.01

# 

2017-03-02

# 1--

### SINGLE FREQUENCY LASER DIODES Distributed Feedback Laser

General Product Information						
Product	Application					
780 nm DFB Laser	Spectroscopy					
with hermetic 14-Pin Butterfly Housing (RoHS compliant)	Metrology					
including Monitor Diode, Thermoelectric Cooler and Thermistor						
with PM Fiber and angle-polished Connector (APC)						

#### Absolute Maximum Ratings

Symbol	Unit	min	typ	max
Ts	°C	-40		85
T <sub>C</sub>	°C	-40		85
T <sub>LD</sub>	°C	10		50
١ <sub>F</sub>	mA			160
V <sub>R</sub>	V			2
P <sub>opt</sub>	mW			50
I <sub>TEC</sub>	А			1.8
V <sub>TEC</sub>	V			3.2
	T <sub>s</sub> T <sub>c</sub> T <sub>LD</sub> I <sub>F</sub> V <sub>R</sub> V <sub>R</sub> I <sub>TEC</sub>	$\begin{array}{c c} T_{S} & \circ C \\ T_{C} & \circ C \\ T_{LD} & \circ C \\ I_{F} & mA \\ V_{R} & V \\ P_{opt} & mW \\ I_{TEC} & A \end{array}$	$\begin{array}{c c c c c c c c c c c c c c c c c c c $	Ts °C -40   T_c °C -40   T_LD °C 10   I_F mA VR   V_R V V   Popt mW I   I_EC A I

#### **Recommended Operational Conditions**

Parameter	Symbol	Unit	min	typ	max
Operational Temperature at Case	T <sub>case</sub>	°C	-20		65
Operational Temperature at Laser Chip	T <sub>LD</sub>	°C		25	
Forward Current	I <sub>F</sub>	mA			140
Output Power	P <sub>opt</sub>	mW		40	

#### Characteristics at $T_{LD}$ = 25° at BOL

Parameter	Symbol	Unit	min	typ	max
Center Wavelength	$\lambda_{C}$	nm	779	780	781
Linewidth (FWHM)	Δλ	MHz		2	
Temperature Coefficient of Wavelength	dλ / dT	nm / K		0.06	
Current Coefficient of Wavelength	dλ / dI	nm / mA		0.003	
Sidemode Supression Ratio	SMSR	dB	30	45	



#### Measurement Conditions / Comments

Stress in excess of one of the Absolute Maximum Ratings may damage the laser. Please note that a damaging optical power level may occur although the maximum current is not reached. These are stress ratings only, and functional operation at these or any other conditions beyond those indicated under Recommended Operational Conditions is not implied.

#### Measurement Conditions / Comments

measui	ed by in	tegrated	Thermis	tor	
	cu 29	ieg. area			
Measu	rement (	Conditio	ns / Corr	ments	
			ns / Corr	ments	
see ima	ages on p		ns / Com	ments	
	ages on p		ns / Con	nments	_
see ima	ages on p		ns / Com	iments	
see ima	ages on p		ns / Com	iments	
see ima	ages on p		ns / Com	iments	
see ima 40 mV	ages on p		ns / Com	nments	

© All rights reserved by eagleyard Photonics GmbH. This data sheet will be electronically administered and is subject to change without notice. Uncontrolled copy when printed.

eagleyard Photonics GmbH

Rudower Chaussee 29 12489 Berlin GERMANY fon +49. 30. 6392 4520 fax +49. 30. 6392 4529

info@toptica-eagleyard.com www.toptica-eagleyard.com

Revision 1.01

### SINGLE FREQUENCY LASER DIODES Distributed Feedback Laser

Characteristics at T <sub>LD</sub> = 25° at BOL						
Parameter	Symbol	Unit	min	typ	max	
Laser Current @ P <sub>opt</sub> = mW	I <sub>LD</sub>	mA			140	
Slope Efficiency	η	W / A	0.15	0.5	0.8	
Threshold Current	I <sub>th</sub>	mA			70	
Polarization Extinction Ratio	PER	dB		15		

Measurement Conditions / Comments					
ex fiber					
$P_{opt} = 40 \text{ mW}$					

Monitor	Diode

Parameter	Symbol	Unit	min	typ	max
Monitor Detector Responsivity	I <sub>mon</sub> / P <sub>opt</sub>	µA/mW	1		20

#### Thermoelectric Cooler

Parameter	Symbol	Unit	min	typ	max
Current	I <sub>TEC</sub>	А		0.4	
Voltage	U <sub>TEC</sub>	V		0.8	
Power Dissipation (total loss at case)	Ploss	W		0.5	
Temperature Difference	ΔΤ	К			50

#### Thermistor (Standard NTC Type)

Parameter	Symbol	Unit	min	typ	max
Resistance	R	kΩ		10	
Beta Coefficient	β			3892	
Steinhart & Hart Coefficient A	А			1.1293 x 10	-3
Steinhart & Hart Coefficient B	В			2.3410 x 10	-4
Steinhart & Hart Coefficient C	С		:	8.7755 x 10	-8

Measurement Conditions / Comments	
$P_{opt} = 40 \text{ mW}, \Delta T = 20 \text{ K}$	
$P_{opt} = 40 \text{ mW}, \Delta T = 20 \text{ K}$	
$P_{opt} = 40 \text{ mW}, \Delta T = 20 \text{ K}$	
$P_{opt} = 40 \text{ mW}, \Delta T =  Tcase - TLD $	

<sub>LD</sub> = 25° C	
$R_{1}/R_{2}=e^{-\beta(1/T_{1}-1/T_{2})}$ at $T_{LD}=$	0° 50° C
$1/T = A + B(\ln R) + C(\ln R)^{3}$	
T: temperature in Kelvin	
R: resistance at T in Ohm	

Measurement Conditions / Comments

non / P <sub>opt</sub>	µA/mW	1	20	$U_{R} =$	5 V

0.4		$P_{opt} = 40 \text{ mW}, \Delta T = 20 \text{ K}$
0.8		$P_{opt} = 40 \text{ mW}, \Delta T = 20 \text{ K}$
0.5		$P_{opt} = 40 \text{ mW}, \Delta T = 20 \text{ K}$
	50	$P_{opt} = 40 \text{ mW}, \Delta T =  Tcase - TL$

© All rights reserved by eagleyard Photonics GmbH. This data sheet will be electronically administered and is subject to change without notice. Uncontrolled copy when printed.

eagleyard Photonics GmbH

Rudower Chaussee 29 12489 Berlin GERMANY fon +49. 30. 6392 4520 fax +49. 30. 6392 4529

info@toptica-eagleyard.com www.toptica-eagleyard.com





Revision 1.01




2017-03-02

### SINGLE FREQUENCY LASER DIODES Distributed Feedback Laser

#### Pin Assignment


1	Thermoelectric Cooler (+)	14	Thermoelectric Cooler (-)
2	Thermistor	13	Case
3	Photodiode (Anode)	12	not connected
4	Photodiode (Cathode)	11	Laser Diode (Cathode)
5	Thermistor	10	Laser Diode (Anode)
6	not connected	9	not connected
7	not connected	8	not connected
All 1	4 pins are isolated from case.		

#### Package Drawings

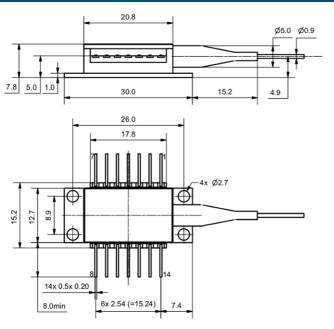


#### Fiber and Connector Type

PM Fiber	900 / 125 / 5.5 $\mu m,$ UV/Polyester-elastomer Coating (l = 1 +/-0.1 m)
Connector	different variants available

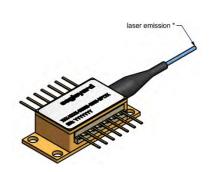

Measurement Conditions / Comments



© All rights reserved by eagleyard Photonics GmbH. This data sheet will be electronically administered and is subject to change without notice. Uncontrolled copy when printed.

eagleyard Photonics GmbH

Rudower Chaussee 29 12489 Berlin GERMANY fon +49. 30. 6392 4520 fax +49. 30. 6392 4529

AIZ-16-0222-1415


info@toptica-eagleyard.com www.toptica-eagleyard.com


Revision 1.01

### SINGLE FREQUENCY LASER DIODES **Distributed Feedback Laser**

#### **Typical Measurement Results**

#### Output Power vs. Current

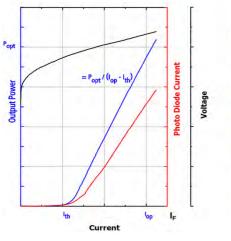

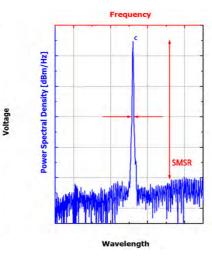

Spectra at Specified Optical Output Power

Performance figures, data and any illustrative material provided in this specification are typical and must be specifically confirmed in writing by eagleyard Photonics before they become applicable to any particular order or contract. In accordance with the eagleyard Photonics policy of continuous improvement specifications may change without notice.

#### Unpacking, Installation and Laser Safety

Unpacking the laser diodes should only be done at electrostatic safe workstations (EPA). Though protection against electro static discharge (ESD) is implemented in the laser package, charges may occur at surfaces. Please store this product in its original package at a dry, clean place until final use. During device installation, ESD protection has to be maintained.

The DFB laser is sensitive against optical feedback, so an optical isolator may be required in order to avoid any disturbance of the emission spectrum. Operating at moderate temperatures on proper heat sinks will contribute to a long lifetime of the diode.

Avoid direct and/or indirect exposure to the free running beam. Collimating and focussing the free running beam with optics as common in optical instruments will increase threat to the human eye.

Performance figures, data and any illustrative material provided in this specification are typical and must be specifically confirmed in writing by eagleyard Photonics before they become applicable to any particular order or contract. In accordance with the eagleyard Photonics policy of continuous improvement specifications may change without notice.



© All rights reserved by eagleyard Photonics GmbH. This data sheet will be electronically administered and is subject to change without notice. Uncontrolled copy when printed.

eagleyard Photonics GmbH

Rudower Chaussee 29 12489 Berlin GERMANY fon +49. 30. 6392 4520 fax +49. 30. 6392 4529



OPTICA