

EYP-ECL-0795-00025-1300-BFY12-0005

Revision 0.51


25.07.2025

SINGLE FREQUENCY LASER External Cavity Diode Laser



General Product Information

Product	Application
795 nm mini-ECL	Spectroscopy (Rb D1 line)
with hermetic 14-Pin Butterfly Housing (RoHS compliant)	
including Monitor Diode, Thermoelectric Cooler and Thermistor	
with integrated μ -Isolator and PM Fiber	

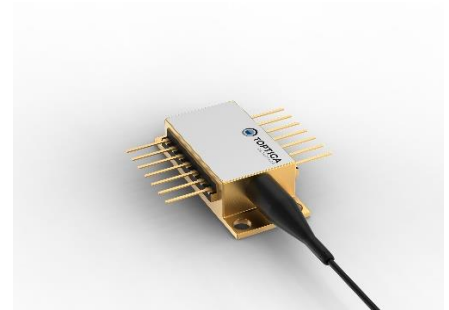

Absolute Maximum Ratings

Parameter	Symbol	Unit	min	typ	max
Storage Temperature	T_S	$^{\circ}\text{C}$	-40		85
Operational Temperature at Case	T_C	$^{\circ}\text{C}$	-40		85
Operational Temperature at Chip	T_{chip}	$^{\circ}\text{C}$	-5		50
Forward Current	I_F	mA			270
Reverse Voltage	V_R	V			2
Output Power	P_{opt}	mW			30
TEC Current	I_{TEC}	A			1.4
TEC Voltage	V_{TEC}	V			4.8

Measurement Conditions / Comments

Stress in excess of one of the Absolute Maximum Ratings may damage the laser. Please note that a damaging optical power level may occur although the maximum current is not reached. These are stress ratings only, and functional operation at these or any other conditions beyond those indicated under Recommended Operational Conditions is not implied.

Recommended Operational Conditions

Parameter	Symbol	Unit	min	typ	max
Operational Temperature at Case	T_{case}	$^{\circ}\text{C}$	-20		65
Operational Temperature at Chip	T_{chip}	$^{\circ}\text{C}$	0		40
Forward Current	I_F	mA			250
Output Power	P_{opt}	mW	5		25

Measurement Conditions / Comments

measured by integrated Thermistor

EYP-ECL-0795-00025-1300-BFY12-0005

Revision 0.51

25.07.2025

SINGLE FREQUENCY LASER External Cavity Diode Laser



Characteristics

Tchip = 25 °C at BOL

Parameter	Symbol	Unit	min	typ	max
Center Wavelength	λ_C	nm	794	795	796
Target Wavelength	λ_T	nm		794.98	
Linewidth	$\Delta\lambda$	MHz		0.2	
Mode-hop free Tuning Range	$\Delta\lambda_{\text{tune}}$	pm		20	
Output Power	P_{opt}	mW			25
Sidemode Suppression Ratio	SMSR	dB	30	45	
Temp. Coefficient of Wavelength	$d\lambda / dT$	nm/K		0.008	
Current Coefficient of Wavelength	$d\lambda / dI$	nm/mA		0.001	
Laser Current	I_{LD}	mA			250
Slope Efficiency	η	mW/mA		0.2	
Threshold Current	I_{th}	mA		60	
Polarization Extinction Ratio	PER	dB		20	

Measurement Conditions / Comments

reached within Tchip = 0 °C ... 40 °C
measured in the time scale of 1 ms
By current tuning, at target wavelength

Popt = 25 mW

Popt = 25 mW

Monitor Diode

Parameter	Symbol	Unit	min	typ	max
Monitor Detector Responsivity	$I_{\text{mon}} / P_{\text{of}}$	μA/mW		10	

Measurement Conditions / Comments

5 V

Thermoelectric Cooler

Parameter	Symbol	Unit	min	typ	max
Current	I_{TEC}	A		0.4	
Voltage	U_{TEC}	V		1.5	
Power Dissipation (total loss at case)	P_{loss}	W		0.5	
Temperature Difference	ΔT	K			50

Measurement Conditions / Comments

Popt = 25 mW, $\Delta T = 20$ KPopt = 25 mW, $\Delta T = 20$ KPopt = 25 mW, $\Delta T = 20$ KPopt = 25 mW, $\Delta T = |T_{\text{case}} - T_{\text{chip}}|$

Thermistor (Standard NTC Type)

Parameter	Symbol	Unit	min	typ	max
Resistance	R	kΩ		10	
Beta Coefficient	b			3892	
Steinhart & Hart Coefficient A	A			1.1293×10^{-3}	
Steinhart & Hart Coefficient B	B			2.3410×10^{-4}	
Steinhart & Hart Coefficient C	C			8.7755×10^{-8}	

Measurement Conditions / Comments

Tchip = 25 °C

 $R_1/R_2 = e^{b(1/T_1 - 1/T_2)}$ at Tchip = 0 ... 50 °C $1/T = A + B(\ln R) + C(\ln R)^3$

T: Temperature in Kelvin

R: resistance at T in Ω

EYP-ECL-0795-00025-1300-BFY12-0005

Revision 0.51

25.07.2025


SINGLE FREQUENCY LASER External Cavity Diode Laser





Pin Assignment

1 Thermoelectric Cooler (+)	14 Thermoelectric Cooler (-)
2 Thermistor	13 Case
3 Photo Diode Anode	12 not connected
4 Photo Diode Cathode	11 Laser Diode Cathode
5 Thermistor	10 Laser Diode Anode
6 not connected	9 not connected
7 not connected	8 not connected

Top View

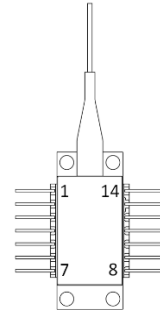

Package Drawings

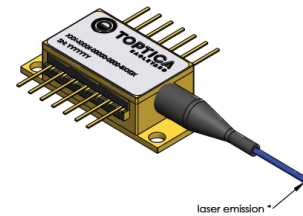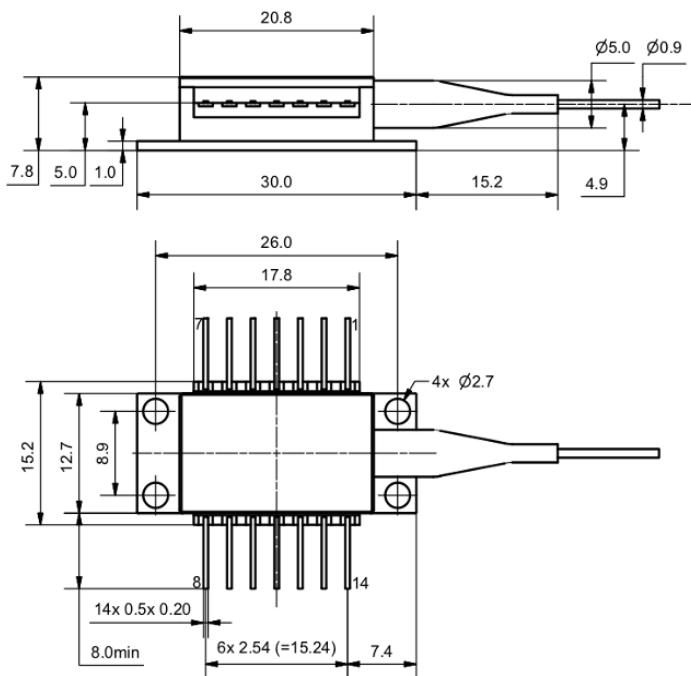

* For properties of fiber pigtail and connector type
please see P/N specification sheet

AIZ-16-0222-1415

EYP-ECL-0795-00025-1300-BFY12-0005

Revision 0.51


25.07.2025

SINGLE FREQUENCY LASER External Cavity Diode Laser



Fiber and Connector Type (Output)	
Parameter	
PM Fiber	900 / 125 / 5.5 μm, UV/Polyester-elastomer Coating (l = 1 +/-0.1 m)
Connector	FC/APC (narrow key / 2mm)

Measurement Conditions / Comments

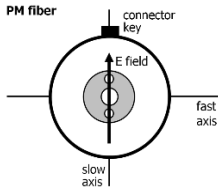

The diagram illustrates the cross-section of a polarization-maintaining (PM) fiber. It shows a central core with an elliptical shape. The major axis is labeled 'fast axis' and the minor axis is labeled 'slow axis'. An arrow labeled 'E field' points along the fast axis. A 'connector key' is indicated at the top of the fiber. The entire assembly is labeled 'PM fiber'.

EYP-ECL-0795-00025-1300-BFY12-0005

Revision 0.51


25.07.2025

SINGLE FREQUENCY LASER External Cavity Diode Laser




Unpacking, Installation and Laser Safety

Unpacking the laser diodes should only be done at electrostatic safe workstations (EPA). Though protection against electro static discharge (ESD) is implemented in the laser package, charges may occur at surfaces. Please store this product in its original package at a dry, clean place until final use. During device installation, ESD protection has to be maintained.

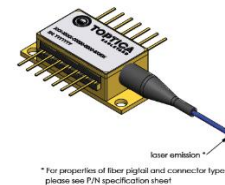

A laser diode is sensitive against optical feedback, so an optical isolator may be required in order to avoid any disturbance of the emission spectrum. Operating at moderate temperatures on proper heat sinks will contribute to a long lifetime of the diode.

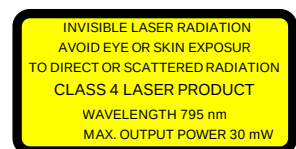

Avoid direct and/or indirect exposure to the free running beam. Collimating and focussing the free running beam with optics as common in optical instruments will increase threat to the human eye.

Each laser diode will come with an individual test protocol verifying the parameters given in this document.



Performance figures, data and any illustrative material provided in this specification are typical and must be specifically confirmed in writing by eagleyard Photonics before they become applicable to any particular order or contract. In accordance with the eagleyard Photonics policy of continuous improvement specifications may change without notice.