

Revision 1.01

GAIN CHIPS AR coated Fabry-Perot Laser



General Product Information

Product	Application
tunable 690 nm Fabry-Perot Laser	Spectroscopy
for use in an External Cavity Diode Laser (ECDL)	
sealed SOT Housing	
Monitor Diode	



Absolute Maximum Ratings

Parameter	Symbol	Unit	min	typ	max
Storage Temperature	T_S	°C	-40		85
Operational Temperature at Case	T_{C}	°C	0		30
Forward Current	I _F	mA			160
Reverse Voltage	V_R	V			0
Output Power (extracavity)	P_{opt}	mW			20

Measurement Conditions / Comments

Stess in excess of the Absolute Maximum Ratings can cause permanent damage to the device.

Recommended Operational Conditions

Parameter	Symbol	Unit	min	typ	max
Operational Temperature at Case	T _C	°C		20	
Forward Current	I _F	mA			140

Measurement	Conditions /	Comments	

Characteristics ex-cavity at T_C= 20°C, BOL under recommended working condition

Parameter	Symbol	Unit	min	typ	max
Center Wavelength	λ_{C}	nm		685	
Tuning Range	$\Delta \lambda_{\text{tun}}$	nm	675		692
Output Power	P_{opt}	mW		15	
Polarization				TE	
Spatial Mode (transversal)				TEM ₀₀	
Monitor Detector Responsivity	I_{mon} / P_{ASE}	μΑ/mW	1		40

Measurement Conditions / Comments

The actual achieved wavelength and power are strongly influenced by the external cavity. eyP gives no guarantee on these parameters.

E field parallel to Pin 2 - Pin 3 - plane Fundamental Mode $U_{R\,MD} = 5 \; V$



Revision 1.01

GAIN CHIPS AR coated Fabry-Perot Laser



Chip Parameter

Parameter	Symbol	Unit	min	typ	max
Cavity Length	L	μm		1000	
Reflectivity at Front Facet	R_{ff}			3·10 ⁻⁴	1·10 ⁻³

Measurement Conditions / Comments


Package Dimensions

Parameter	Symbol	Unit	min	typ	max
Height of Emission Plane	h	mm	3.50	3.65	3.70
Excentricity of Emission Center	R	mm			0.12
Pin Length	L _{PIN}	mm		14	

Measurement Conditions / Comments
reference plane: top side of TO header
reference: center of outer diameter of header

Package Pinout

- 1 Laser Diode Cathode, Monitor Diode Cathode, Case
- 2 Photo Diode Anode
- 3 Laser Diode Anode








Revision 1.01

GAIN CHIPS AR coated Fabry-Perot Laser



Package Drawings

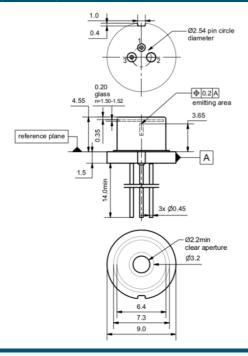



AIZ-16-0421-15




Revision 1.01

GAIN CHIPS AR coated Fabry-Perot Laser



Typical Measurement Results

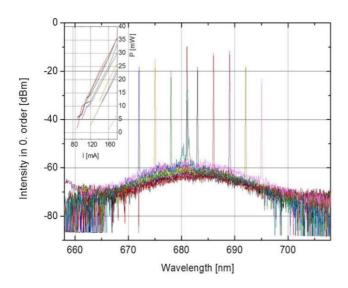

Performance figures, data and any illustrative material provided in this specification are typical and must be specifically confirmed in writing by eagleyard Photonics before they become applicable to any particular order or contract. In accordance with the eagleyard Photonics policy of continuous improvement specifications may change without notice.

Unpacking, Installation and Laser Safety

Unpacking the laser diodes should only be done at electrostatic safe workstations (EPA). Though protection against electro static discharge (ESD) is implemented in the laser package, charges may occur at surfaces. Please store this product in its original package at a dry, clean place until final use. During device installation, ESD protection has to be maintained.

The TPA diode type is known to be sensitive against thermal stress. It should not be operated without appropriate injection from a seed laser. Operating at moderate temperatures on proper heat sinks willl contribute to a long lifetime of the diode. The chip should be protected against moisture. A water vapor content below 5000 ppm is recommended for applications with high reliability requirements.

The laser emission from this diode is close to the invisible infrared region of the electromagnetic spectrum. Avoid direct and/or indirect exposure to the free running beam. Collimating the free running beam with optics as common in optical instruments will increase threat to the human eye.

Each laser diode will come with an individual test protocol verifying the parameters given in this document.







VISIBLE LASER RADIATION AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION CLASS 4 LASER PRODUCT WAVELENGTH 685 nm MAX. OUTPUT POWER 20 mW

IEC-60825-



